
# insulParq



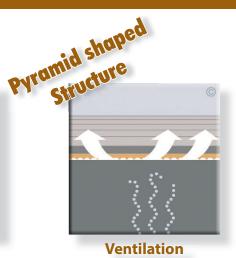





## **Parquet flooring underlay Reduces impact noise**

**Application** Under parquet flooring

### **Characteristics**

Alu tape included !

Acoustic insulation :  $\Delta Lw 21 dB$ Value λ: 0,034 W/mK Materials : closed-cell polyolefine foam Pyramid shaped structure Thickness :  $\pm$  3 mm Standard size : 25 m x 1 m rolls Colour : café late Aluminium tape supplied : 25 m x 5 cm

### **Advantages**

**Reduces impact noise** Thermal and acoustic insulation Easy and quick to lay Pyramid-shaped structure = resilience and ventilation Durable, will not tear on laying Protects the flooring against humidity Alu tape provided

= completely impenetrable



## insulParq

### High performance parquet flooring underlay Significantly reduces impact noises



### **Description**

InsulParq is a thin underlay for both flexible and inflexible parquet flooring. It uses pyramid technology in order to reduce impact noise to the greatest possible extent. This technique achieves not only resilience but also good ventilation beneath the parquet flooring. InsulParq forms a genuine barrier against humidity and thus effectively protects your parquet flooring.

### Installation instructions

**Laying the roll :** The floor should be smooth and carefully brushed. Unroll InsulParq from one side of the room to the other, leaving a surplus at each end running slightly up each wall. Apply the supplied aluminium tape to the joints. Lay the parquet flooring and, only after this has been done, trim the surplus InsulParq. Attach the skirting board to the wall, slightly higher than the flexible flooring, so that the two do not touch. Seal the gap between the skirting board and the flooring with a silicone sealant.



 Unroll InsulParq wall to wall, leaving a surplus running up each wall



<u>Advantage:</u> the aluminium tape included with each roll of InsulParq makes the underlay completely impenetrable and thus protects the parquet flooring from humidity



2. Apply the aluminium tape to the joints



3. Place the parquet flooring, leaving the surplus underlay



4. Trim the surplus InsulParq



5. Attach the skirting board a few millimetres above the parquet flooring, then fill the gap with sealant

Specialists in impact noise insulation



insulco sprl • Rue Buisson aux Loups 1a • 1400 Nivelles • **BELGIUM Tel : 0032 67 41 16 10 • Fax : 0032 67 41 16 16** e-mail : insulco@insulco.be • Web : **www.insulit.com**